

baierBOARD

STANDARD PLASTERBOARD FIXING SCHEDULE

TIMBER FRAME VERTICAL FIXING


RECOMMENDED OPTION

ALTERNATIVE OPTION

SCREW OR NAIL FIXING AT 300 mm CENTRES TO PERIMETER STUDS, 600mm CENTRES TO TOP AND BOTTOM PLATES

DAUB OF ADHESIVE TO CENTRE OF DWANG (NOG)

DAUB OF ADHESIVE AT 600mm CENTRES AND SCREWS OR NAILS AT 600 mm CENTRES TO INTERMEDIATE STUDS

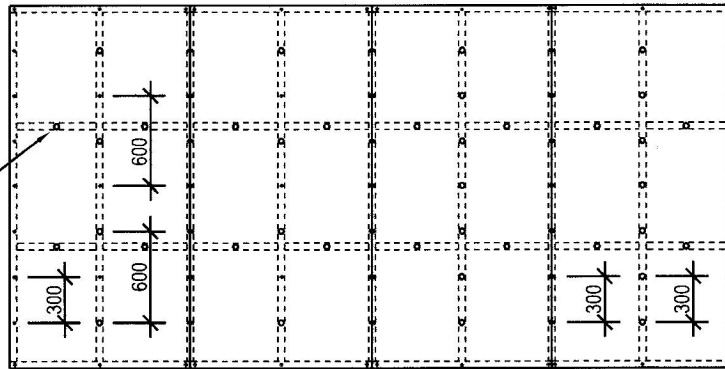

SCREW OR NAIL FIXING AT 300 mm CENTRES TO PERIMETER STUDS, 600mm CENTRES TO TOP AND BOTTOM PLATES

DAUB OF ADHESIVE AT 300mm CENTRES TO INTERMEDIATE STUDS AND TO CENTRE OF DWANG (NOG)

5 - 10mm GAP BETWEEN SHEET AND FLOOR

STUDS AT 600mm CENTRES MAXIMUM

TIMBER FRAME HORIZONTAL FIXING

RECOMMENDED OPTION


ALTERNATIVE OPTION

SCREW OR NAIL FIXING AT 300 mm CENTRES TO PERIMETER STUDS, 600mm CENTRES TO TOP AND BOTTOM PLATES

DAUB OF ADHESIVE TO CENTRE OF DWANG (NOG)

SINGLE SCREW OR NAIL TO EACH STUD WHERE SHEET CROSSES

DAUB OF ADHESIVE AT 600mm CENTRES AND SCREW OR NAIL FIXING AT 600 mm CENTRES TO INTERMEDIATE STUDS

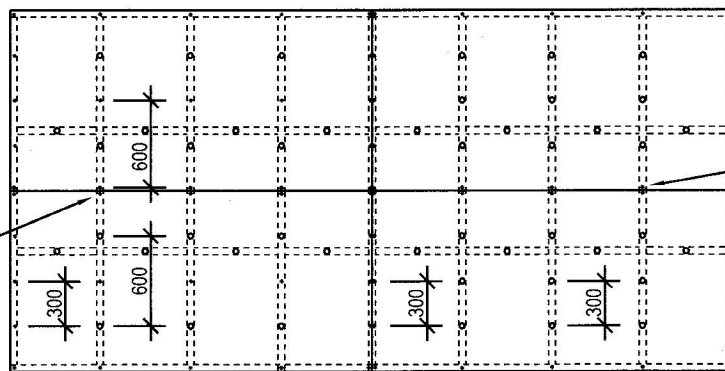

SCREW OR NAIL FIXING AT 300 mm CENTRES TO PERIMETER STUDS, 600mm CENTRES TO TOP AND BOTTOM PLATES

SINGLE SCREW OR NAIL TO EACH STUD WHERE SHEET CROSSES

DAUB OF ADHESIVE AT 300mm CENTRES TO INTERMEDIATE STUDS AND TO CENTRE OF DWANG (NOG)

5 - 10mm GAP BETWEEN SHEET AND FLOOR

STUDS AT 600mm CENTRES MAXIMUM